

# Service Bulletin



SB22-009 7/14/22

---

Subject: Attention to Connecting Starter Cable and Battery Cables


Applicable Model: MFS 75/90/100/115/140A

---

## 〈Summary〉

If the starter cable (red) and the negative battery cable (black) are connected in reverse at the battery, the electrical components and wiring will be damaged. When rigging the outboard motor or connecting / disconnecting the battery cables, please check the following details with care.

Also, please inform dealers and users not to connect the starter cable and the negative battery cable in the reverse battery conditions.

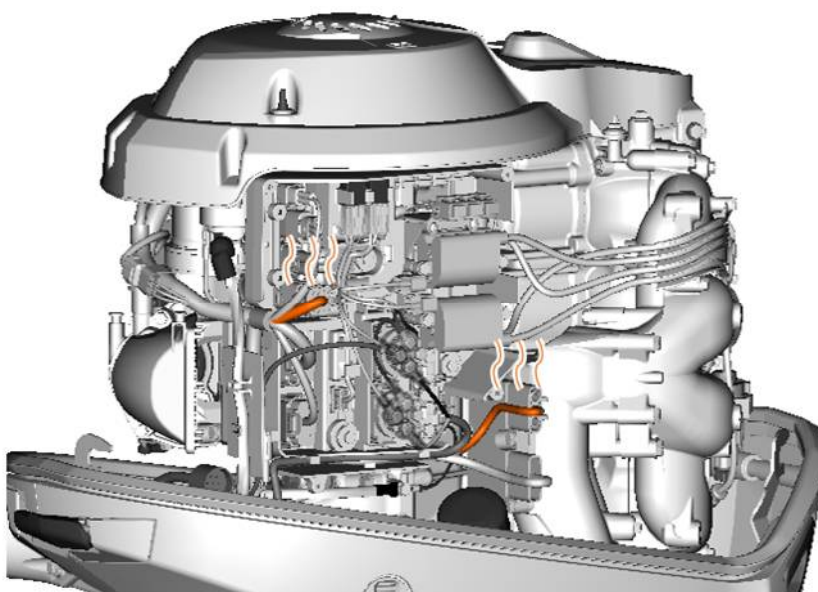

# Service Bulletin




SB22-009 7/14/22

## Battery Connections

Connect the starter cable (Red) and the positive battery cable (Red) to the battery positive terminal first.

Connect the negative battery cable (Black) to the battery negative terminal last.

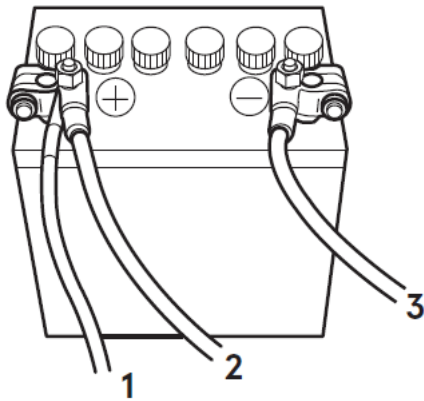

1. Starter Cable (Red)
2. Battery Cable • Positive (Red)
3. Battery Cable • Negative (Black)